

HOLUX

M-241 Wireless GPS Logger Quick Guide

Version 1.3

2007.08.06



Packing List

- | | |
|--------------------------------------|-------|
| 1. M-241 wireless GPS logger | 1 Set |
| 2. AA Battery | 1 Set |
| 3. Car Cigarette adapter + USB cable | 1 Set |
| 4. User guide and Driver CD | 1 Pcs |
| 5. Smart2go DVD | 1 Pcs |
| 6. M-241 Quick Guide | 1 Pcs |
| 7. Warranty card | 1 Pcs |
| Option | |
| 8. Travel power supply | 1 Set |

Product Overview

1 **LCD Screen**

2 **MENU Button**


3 **ENTER Button**

4 **Power Switch**

5 **Battery Cover**

6 **USB Port**

Battery type: 1 AA

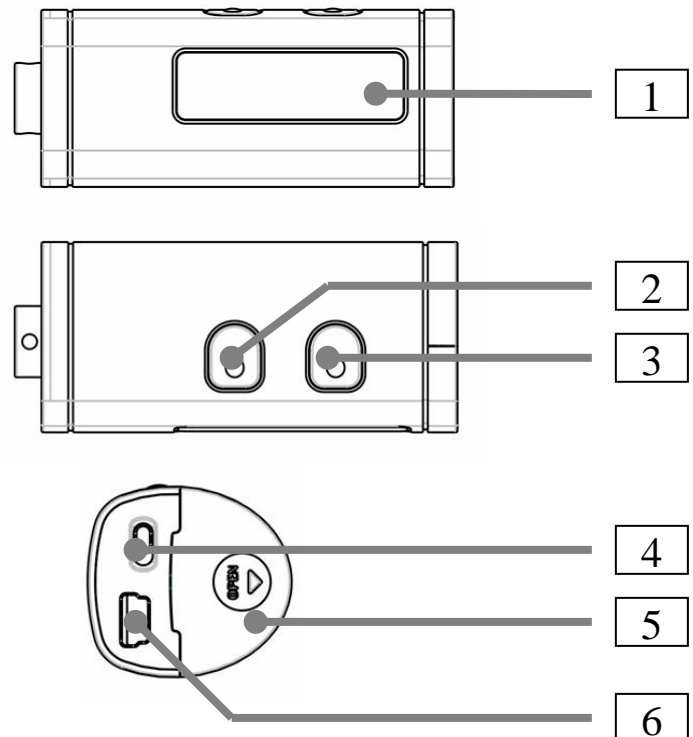


Button Define

MENU Button -> Change & Select function.


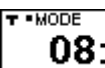
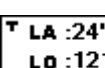
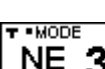
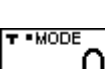
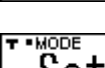
ENTER Button -> ENTER & OK & START & STOP & BEGIN & END function.

When the user presses the "MENU" key and "ENTER" key at the same time, all keys function will "LOCK", and press the "MENU" key and "ENTER" key at the same time again, the "LOCK" status will cancel.



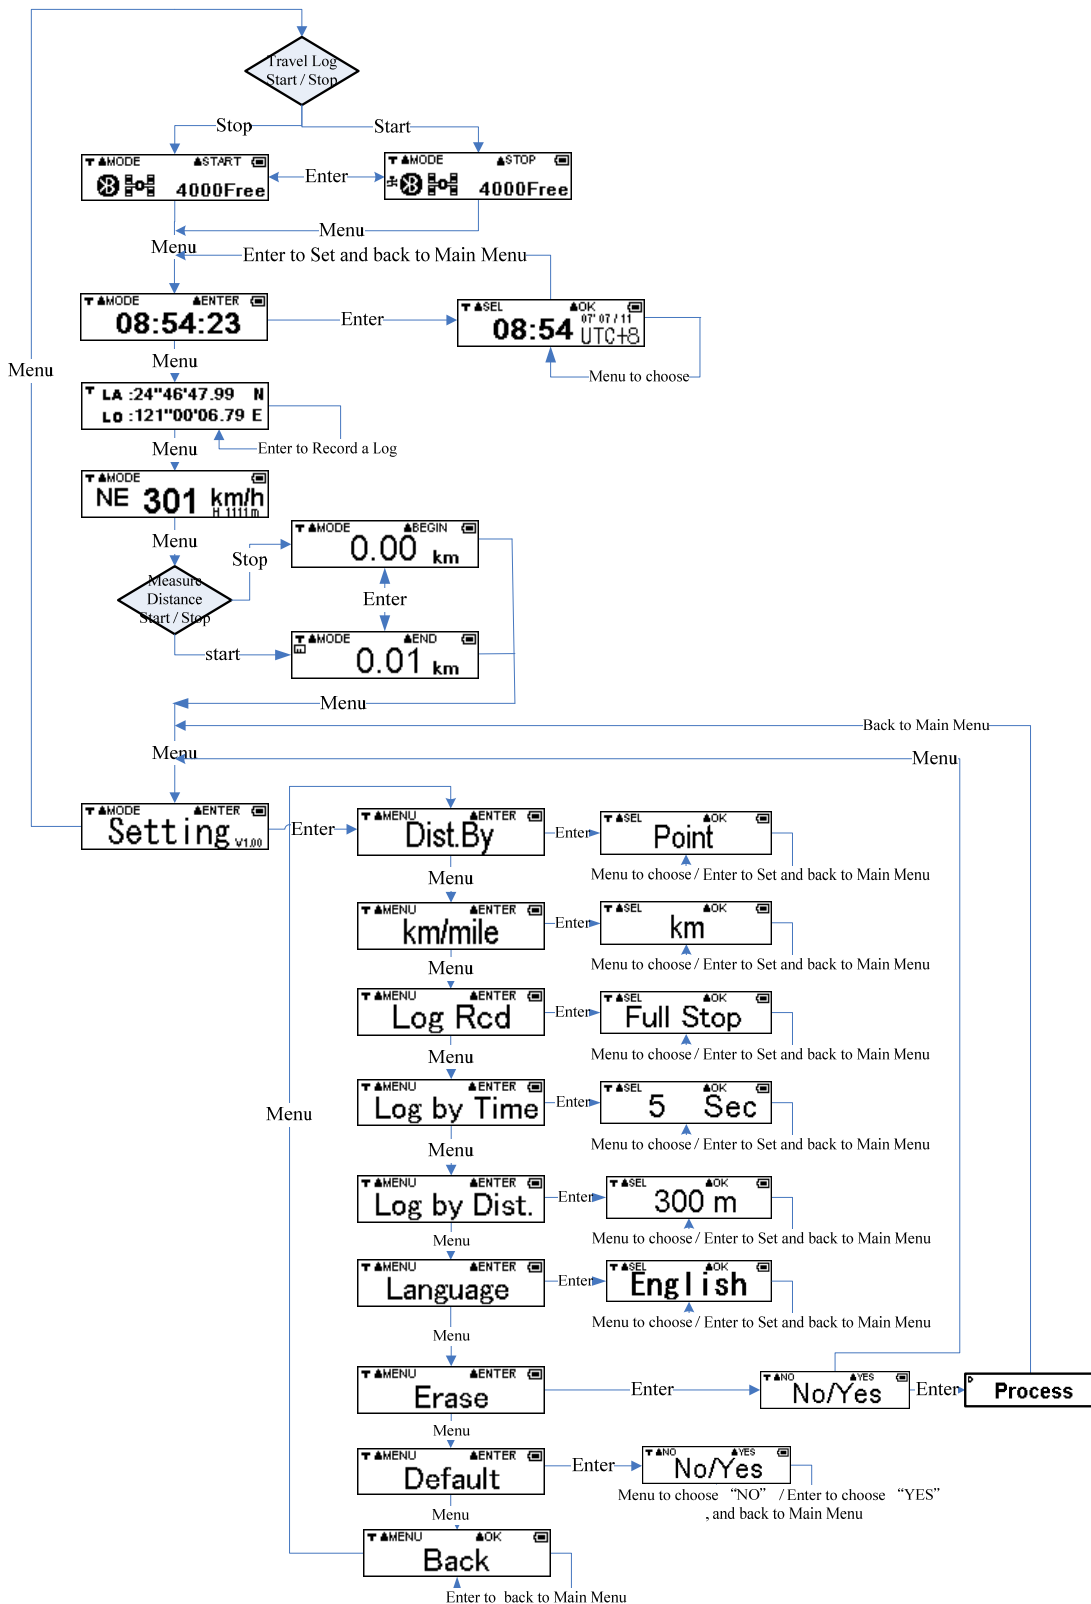








Basic Operations



LCD Display Overview

	MODE START 4000Free	: Track Log Mode
	MODE ENTER 08:54:23	: Time Mode
	MODE LA :24"46'47.99 N LO :121"00'06.79 E	: Show Position Mode
	MODE NE 301 km/h H 1111.0	: Show Speed & Altitude Mode
	MODE BEGIN 0.00 km	: Measure Distance Mode
	MODE ENTER Setting V1.00	: Setting Mode

Icons & Indicators


Icon	Descriptions	Icon	Descriptions
	Log by Time		Measure Distance On
	Log by Distance		Lock On
	Log On		Device & PC Connected
	Record Flag		Battery is full
	Bluetooth Connection		Battery is exhausted
	GPS Fix		

Connecting the device to PC

Using USB Cable

1. Power On the device.
2. Connect the device to a computer with the USB cable provided in the package.
3. Install the USB driver "*CP210x_VCP_Win2K_XP.exe*" from the CD provided in the package.
4. Click **<Start>** menu, select → **<Setting>**, then enter → **<Controller>** and select **<System>** Select **<Device Manager>** Find the **< Connector (COM & LPT)>** and check the "*CP210xUSB to UART Bridge Controller*" message.

Please note that the virtual COM port number might be different on every computer. Before using navigation

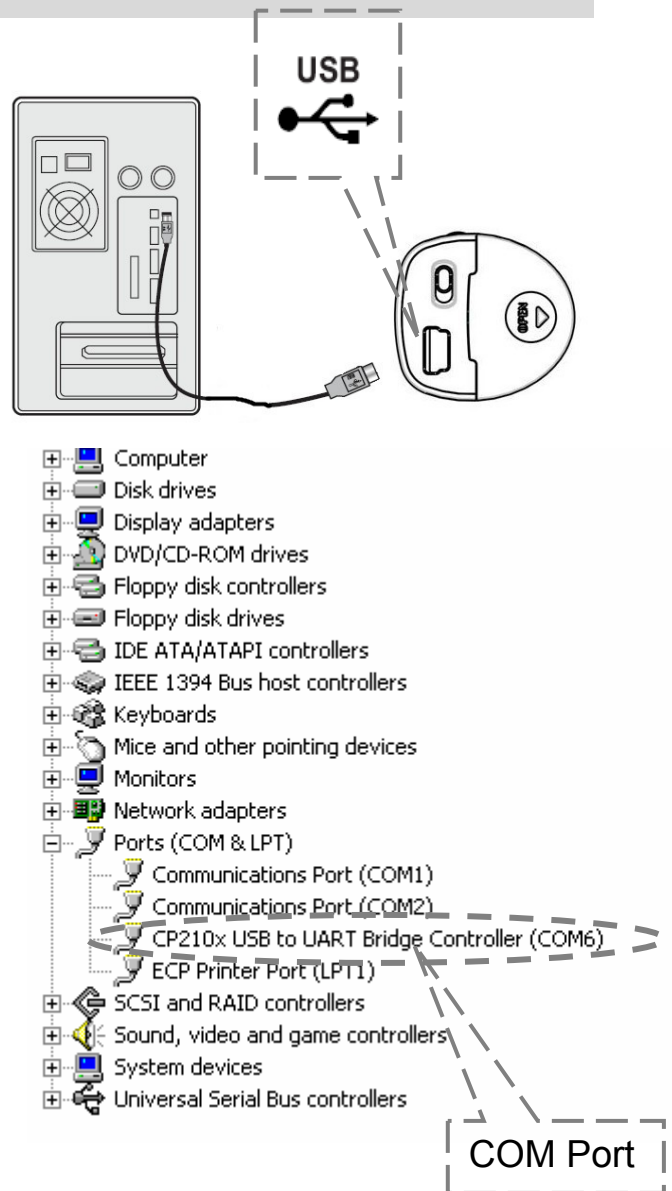

Using Bluetooth

Power On the device, and connect the device to a Host with the Bluetooth interface.

Download Log Data to PC

1. The user can use Holux application software "**HoluxUtility.exe**" to download the log data to the PC after connecting the device to the PC, and easily export the log data to "**Google Earth**" or "**locr GPS Photo**".
2. Concerning all details for "**HoluxUtility.exe**" and "**Google Earth**" and "**locr GPS Photo**", please see the "**M-241 User Manual-V1.2_EN.pdf**" and "**google_earth_user_guide.pdf**".

Notice

1. When "Battery low" icon is blinking on LCD, please replace a fresh new battery.
2. For good GPS signal receiving, please keep the device strap hold up., see the figure of top view.
3. This device is not waterproof and should not be exposed to excessive moisture.
4. Align the poles + and - correctly when inserting batteries.
5. Do not disassemble, crush, short-circuit, or incinerate a battery as it may cause fire, injury, burns, or other hazards.
6. This device has not charge capability.
7. Before turning off, please press "stop" button when device is in logging mode to prevent log data damaged.

